

WALL MOUNTED TV COVERS

Installation Guide v1.1



What You Need:

- Team: 2-3 people
- Tools: Tape measure, spirit/laser level, pencil, stud/pipe detector, hammer drill, screwdriver.
- Hardware: Appropriate wall fixings (plasterboard or masonry).
- Safety: Dust mask, safety glasses, stable step-ladder.

Installation Guide: (TURN OVER THE PAGE FOR A VISUAL GUIDE)

1. Get the TV Cover into Position:

With the TV in its normal position on the wall, have your helpers hold the TV Cover over it. Use a spirit level and tape measure to find the perfect placement,

2. Mark the Mounting Positions:

While the TV Cover is held in place use a pencil to mark the center of the four mounting holes. you can use the cutout "HOLE MARKING GUIDE"* at the bottom of the page to help find the centre

3. Scan and Drill:

As a strict safety precaution, remove the TV from the wall before proceeding. Use a detector to check your four marked spots for hidden pipes or cables (failing to do this risks property damage or serious injury). Put on your safety glasses and dust mask, then drill the holes according to the specifications of your chosen wall fixings. Then, Clean away the dust and debris.

4. Mount the Wall Brackets:

Insert your chosen wall fixings into the drilled holes. Screw the back half of the D-shaped clamp to the wall through its central oval hole. Ensure the open side of the bracket faces inward toward the TV space so the front plate can be attached later.

4. Attach Rubber Pads and Re-hang TV:

The D-shaped rubber pads act as a protective gasket between the TV Cover's side panel and the metal bracket. Press the protruding tabs on the pads into the matching holes on both the mounted bracket and the unattached front cover plate to secure them. Once the pads are in place, safely re-hang your TV on the wall.

5. Secure the TV Cover:

Carefully peel the protective film off the inside of the TV Cover. Lift the TV Cover into place so the side panels slide into the open brackets. Starting with the top two brackets, insert a location pin directly into the hole in the TV Cover's side panel. Place the front cover plate onto the bracket and screw the two halves together; this sandwiches the pin between the bracket halves and grips the TV Cover. Once the top brackets are secure, the TV Cover will support itself while you fit the pins and plates for the bottom two brackets.

6. Final Step & Aftercare:

Before fully tightening the cover plates, remove the protective film from the outside face of the TV Cover. Then, tighten the four bracket cover plates fully, taking care not to over-tighten them. You may clean your TV Cover using a warm, damp microfiber or lint-free cloth, then buff dry. DO NOT use abrasives or chemical-based cleaning products on the TV Cover, as this may cause scratches or degrade the polycarbonate.

HOLE MARKING GUIDE (Please Print this page in A4)



